


TRAIN-Z_MMU_V101r3 (top)

NOTE: hatched areas not fitted !

CAUTION: Watch RN200 when removing IC200 !

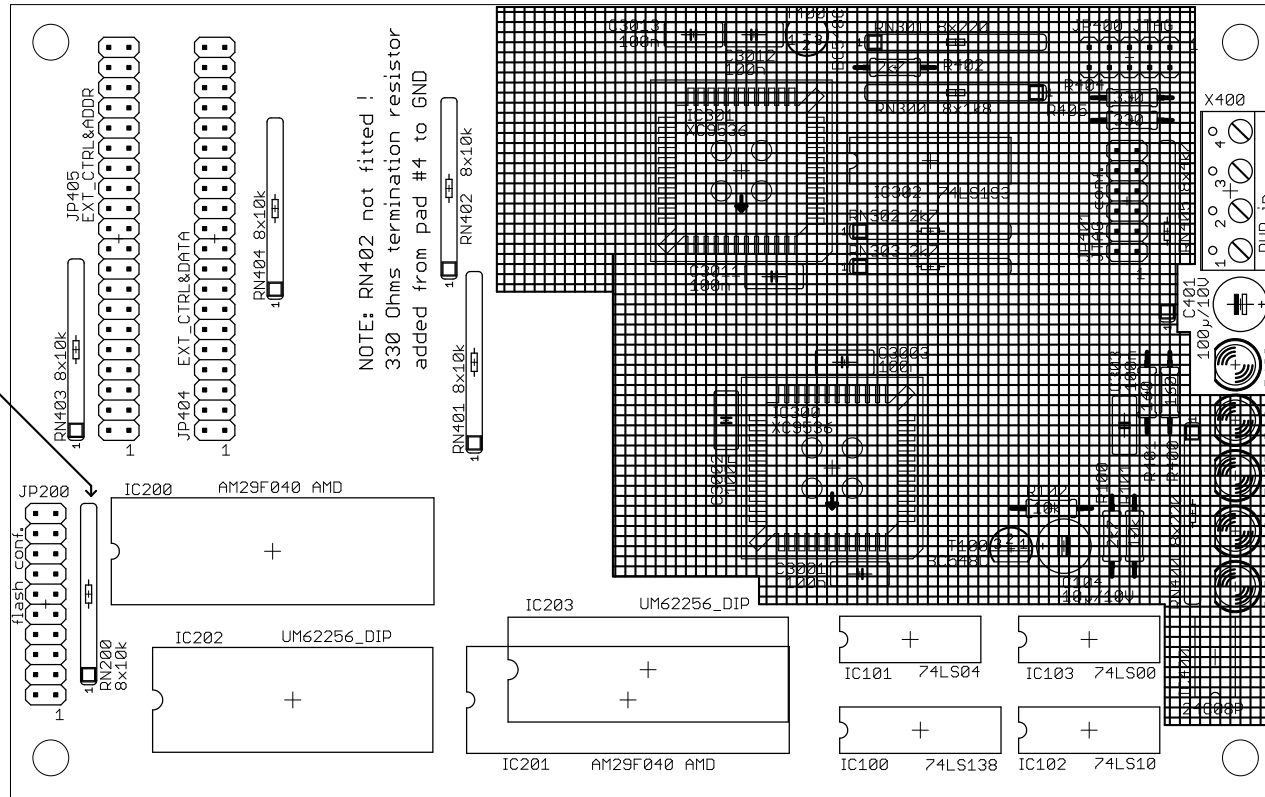

NOTE: RN402 not fitted !
 330 Ohms termination resistor
 added from pad #4 to GND

NOTE: pins 1 and 2 of IC200 and IC201 solder bridge.