


# TRAIN-Z\_MMU\_V101r4 (top)

NOTE: hatched areas not fitted !

CAUTION: Match RN200 when removing IC200 !

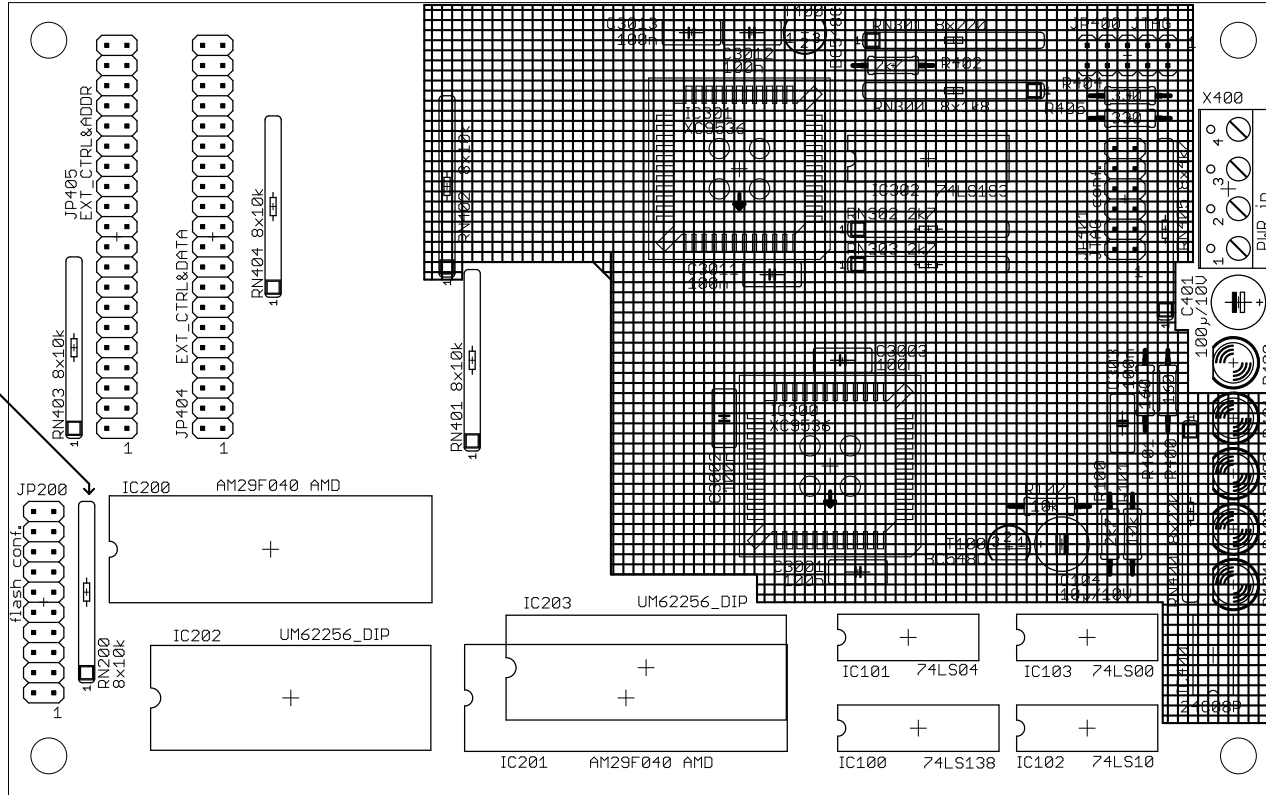

NOTE: pins 1 and 2 of IC200 and IC201 solder bridge.

MMU\_V101r4

1/18/12 5:35 PM

Sheet: >SHEET